



Quick Installation Guide

Cloud PoE Switch

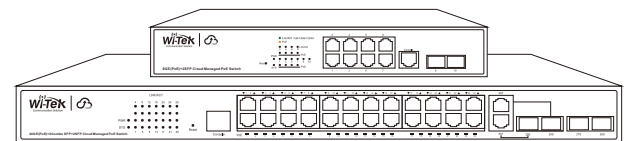


WI-PCMS310GF | WI-PCMS328GF


1. Package Contents

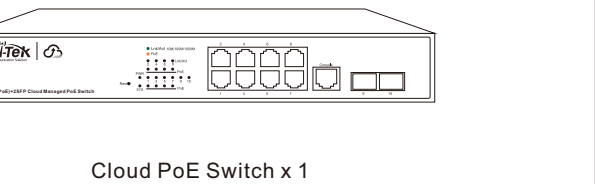


Cloud PoE Switch x 1

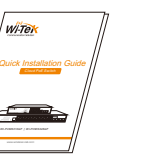


Quick Installation Guide x 1

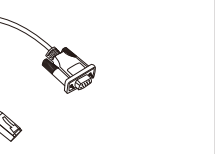

Serial line x 1

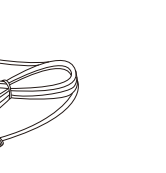

Power Cord x 1

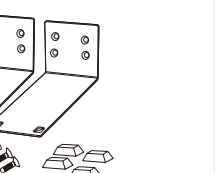


Mounting Accessories
(hook x 2; MATS x 4; screw x 8)


2. Appearance Overview

For WI-PCMS310GF

• Front panel

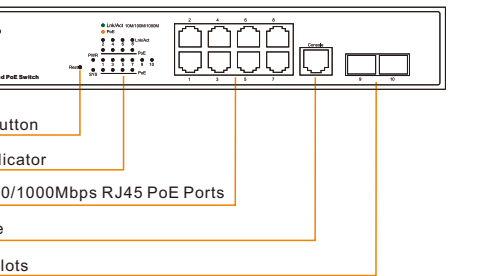

• Back panel

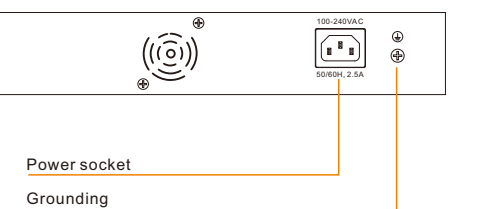


• LED indicator light


LED	Color	Description
PWR	Green	Off: switch does not power on Permanent: the switch is powered on
SYS	Green	Blinking: the system works Out: the system is starting or has no power
LNK/ACT	Green	Off: not connected to the network equipment On light: connected to 10/100/1000Mbps devices Blinking: connected devices are data transmission
PoE	Orange	Off: port is not for terminal equipment power supply Permanent: electrical equipment connected with it, and the normal power supply

For WI-PCMS328GF

• Front panel

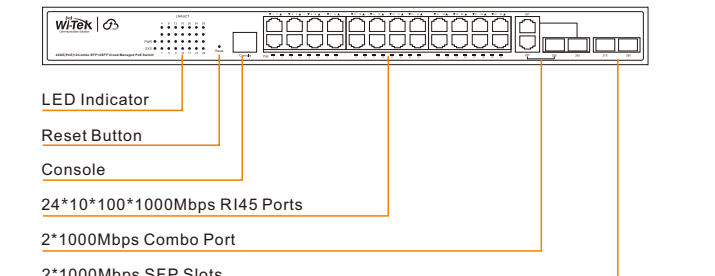

• Back panel

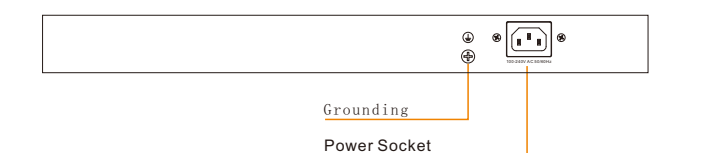


• LED indicator light



LED	Color	Description
PWR	Green	Off: switch does not power on Permanent: the switch is powered on
SYS	Green	Blinking: the system works Out: the system is starting or has no power
LNK/ACT	Green	Off: not connected to the network equipment On light: connected to 10/100/1000Mbps devices Blinking: connected devices are data transmission
PoE	Orange	Off: port is not for terminal equipment power supply Permanent: electrical equipment connected with it, and the normal power supply

3. Installation

• Desktop installation

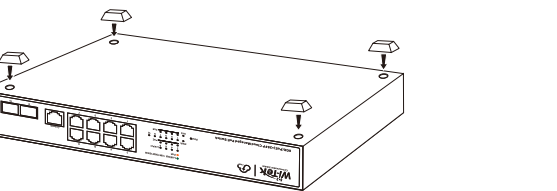


• Rack Installation

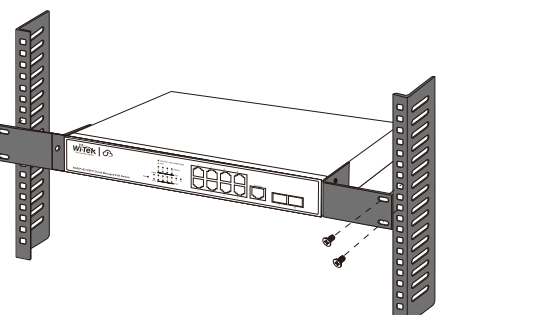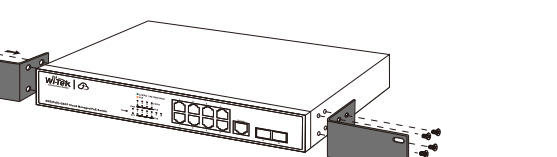

4. Configuration

First, the device is powered on, the Internet is connected to the WAN port of the Gateway, the other one LAN port of the Gateway is connected to the PoE Switch, then the PC is connected to the Switch. Ensure that the PC and the Gateway are in the same subnet.

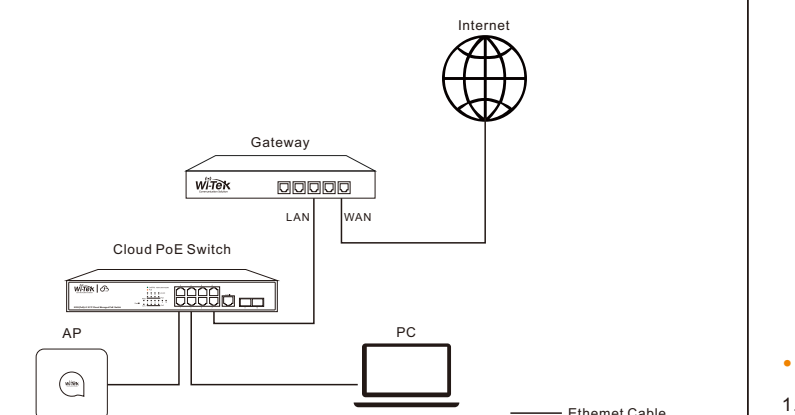


• Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The Switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1




• Cloud login switch configuration

1. Log in to the cloud management interface
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

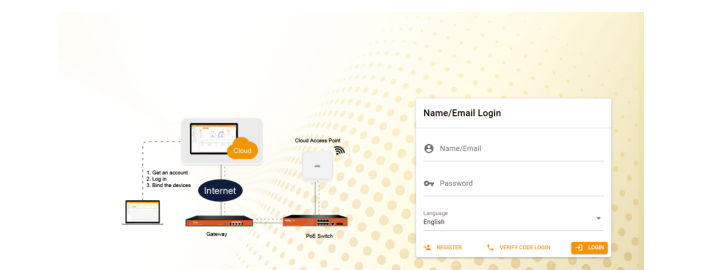



2. Enter the cloud binding switch

(explain: The switch must be connected to the Internet to bind successfully)


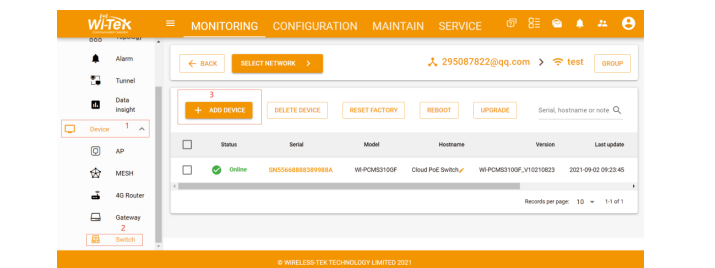


Please enter the device serial number to bind a device to the current group, device can be off when binding.

Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below

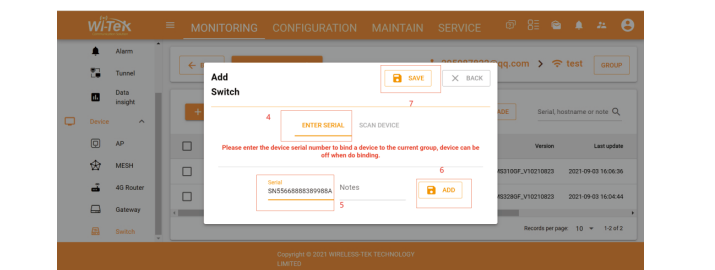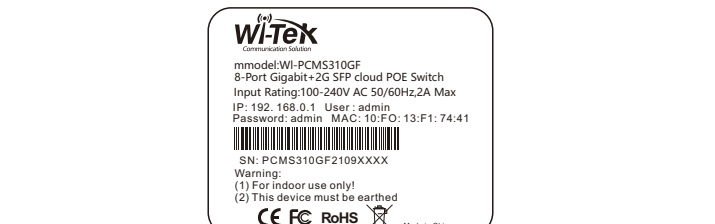

3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then choose to use EWEBoR TELNET to enter the switch. The default account is admin and the password is admin. (After entering the switch, you can configure it based on your own needs)

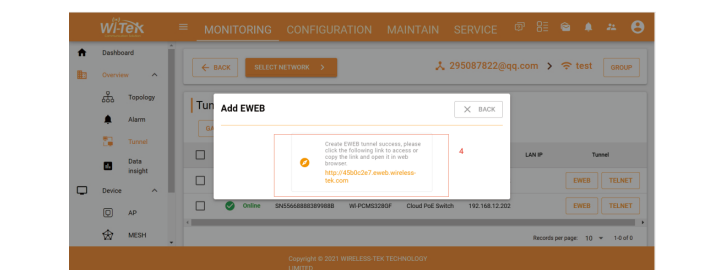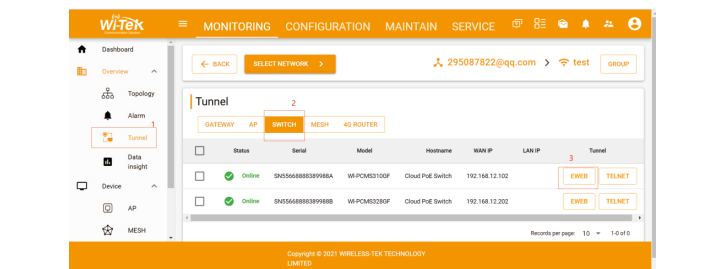

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Biaofang Technology Building 402, Bao'an street, Baoan District, Shenzhen City, Guangdong, China
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com